

SPECIFICATION & INSTALLATION

Solene Silk Bubble Pendant Light

DESCRIPTION

A mid century pendant with a seamless white shade stretched over a fine steel frame and sprayed with a soft, silk-like polymer coat. Nine sculptural shapes from 7.9" to 31.4" wide, all hardwired, all lit by a single E26 bulb that is included.



SHAPES AND SIZES

Shape	Widths and heights
Saucer	15.8" x 8.7", 19.7" x 9.8", 23.6" x 11", 27.6" x 11.8", 31.4" x 12.9"
Ribbed Saucer	15.8" x 8.7", 19.7" x 9.8", 23.6" x 11", 27.6" x 11.8", 31.4" x 12.9"
Lantern	11.8" W x 11.8" H
Tall Oval	7.9" W x 15.8" H
Globe	11.8" W x 11" H, 15.8" W x 14.2" H
Faceted Round	11.8" W x 11" H, 15.8" W x 15" H, 19.7" W x 18.9" H, 23.6" W x 22.8" H
Wavy Drum	13.7" W x 12.6" H, 17.7" W x 16.5" H
Bell	19.7" W x 14.9" H
Rounded Square	15.8" W x 16.5" H

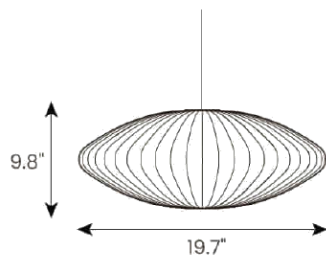
ELECTRICAL

Supply voltage	AC 110 to 240 V (US supply 120 V)
Connection	Hardwired to a ceiling junction box
Lamp base	E26
Maximum lamp	40 W incandescent or LED equivalent
Lamp supplied	Yes, one bulb included
Dimming	With a dimmable bulb and a compatible wall dimmer, not included
Control	Standard wall switch, not included
Location	Indoor dry locations only, IP20

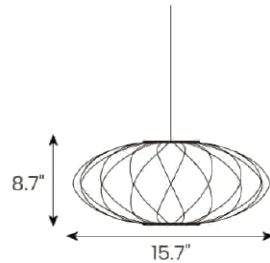
MECHANICAL

Shade	Polymer sprayed over a steel frame, silk-like finish
Finish	White
Cord	59" (150 cm), shortened on site. A longer cord is available on request.
Canopy	Round ceiling canopy, covers the junction box
In the box	Fixture, bulb, canopy, mounting hardware, instructions

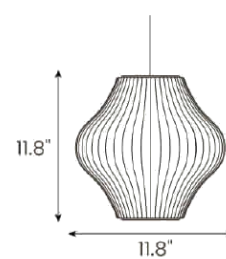
DIMENSIONS

**Saucer**

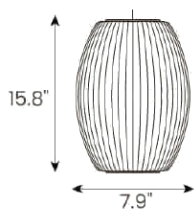
15.8" x 8.7", 19.7" x 9.8", 23.6" x 11", 27.6" x 11.8", 31.4" x 12.9"

**Ribbed Saucer**

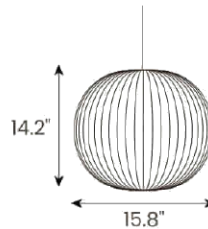
15.8" x 8.7", 19.7" x 9.8", 23.6" x 11", 27.6" x 11.8", 31.4" x 12.9"

**Lantern**

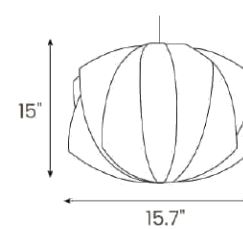
11.8" W x 11.8" H

**Tall Oval**

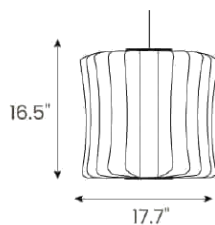
7.9" W x 15.8" H

**Globe**

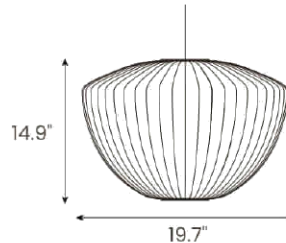
11.8" W x 11" H, 15.8" W x 14.2" H

**Faceted Round**

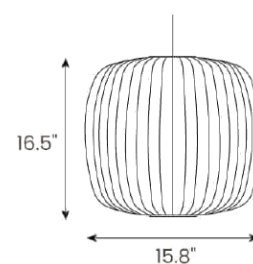
11.8" W x 11" H, 15.8" W x 15" H, 19.7" W x 18.9" H, 23.6" W x 22.8" H

**Wavy Drum**

13.7" W x 12.6" H, 17.7" W x 16.5" H

**Bell**

19.7" W x 14.9" H

**Rounded Square**

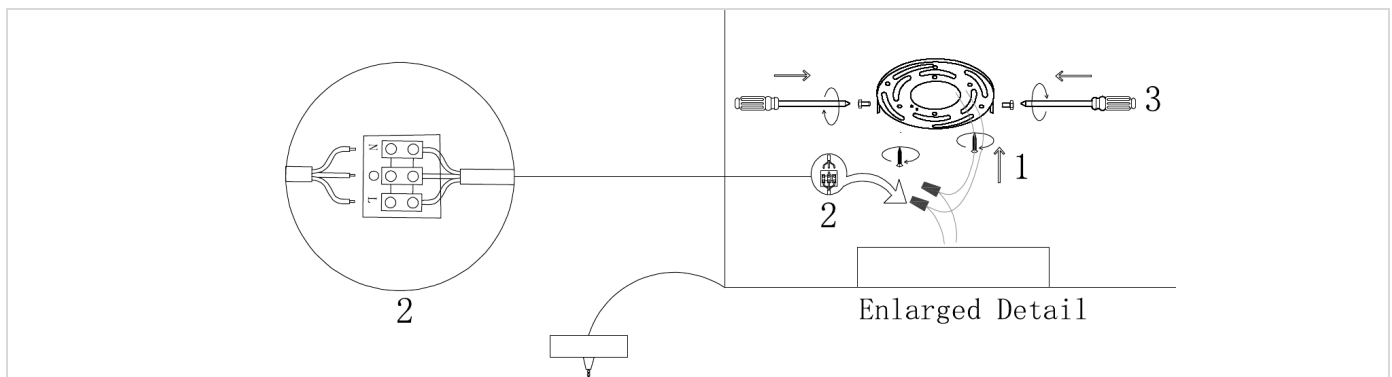
15.8" W x 16.5" H

Widths are measured across the widest point of the shade. Heights are the shade only and do not include the cord.

INSTALLATION

Installation by a licensed electrician is recommended, in accordance with the National Electrical Code and all applicable local codes. A properly mounted ceiling junction box is required. Indoor dry locations only.

1. **Isolate the circuit.** Switch off the supply at the breaker and confirm it is dead before touching any conductor.
2. **Fix the mounting bracket.** Screw the bracket to the ceiling junction box, on fixings rated for the weight of the fixture.
3. **Set the drop.** Shorten the cord to the height wanted before connecting anything. There is 59" to work with.
4. **Connect the supply.** Neutral to neutral (white), ground to ground (green or bare), live to live (black). Tuck the connections into the box.
5. **Close the canopy.** Raise the canopy to the bracket and tighten its screws so it sits flush to the ceiling.
6. **Fit the bulb.** Screw the included E26 bulb into the socket inside the shade, restore power and test.



1 Fix the mounting bracket to the junction box · 2 Connect neutral to N, ground to the ground terminal and live to L at the terminal block · 3 Raise the canopy and tighten its side screws

RECOMMENDED HANGING HEIGHT

Over a dining table or kitchen island	30 to 36" (76 to 91 cm), surface to the base of the shade
Over a bedside or side table	24 to 30" (61 to 76 cm), surface to the base of the shade
In an entry, hallway or stairwell	At least 7 ft (213 cm) of clearance below the shade

SIZING A SHADE TO A TABLE

A shade about half to two thirds the width of the table reads in proportion, so a 19.7" to 31.4" Saucer suits most dining tables. Compact shapes such as the Tall Oval, Lantern and small Globe are better over a nightstand, a reading corner or a narrow hall.

SAFETY AND CARE

- Do not exceed 40 W in the socket. Use a bulb rated for an enclosed fixture.
- Indoor use only. Keep the fixture away from water and steam.
- Let the bulb and shade cool before cleaning or changing a bulb.
- Dust with a soft dry cloth or a vacuum brush. Lift marks with a barely damp cloth, and use no solvents or abrasive cleaners.
- Do not press or lean on the shade. The frame holds its shape but is not load bearing.

NEED HELP?

Info@Lunorre.com
+1-802-267-7628